



# Build an American Kestrel Nest Box

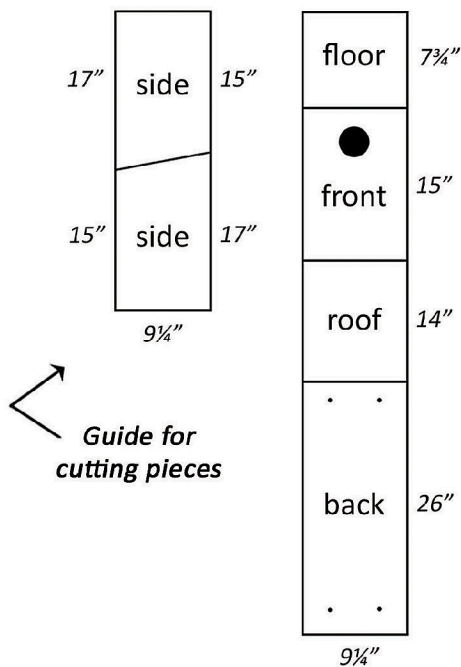

3" (diameter) hole,  
with top of hole 2"  
down from the roof

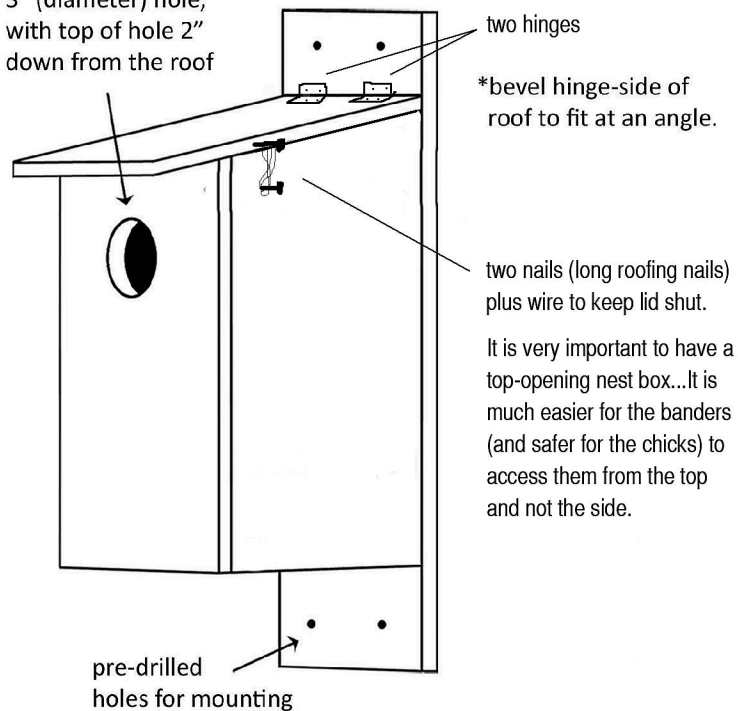

## ***You will need:***

- 1" x 10" x 8' untreated cedar or white pine (1" x 10" boards from the store actually measure 3/4" x 9 1/4").
- Two long roofing nails
- 20-30 1 1/2" wood screws.
- 2 stainless hinges
- Coarse wood shavings (not sawdust).

## ***Instructions***

- Cut lumber using a table saw and entrance hole using a hole saw or jig saw. Pre-drill holes in back if using 3" screws to mount box.
- Assemble box as shown, with wood screws.
- Do not use paint or preservatives.
- Place 2" of wood shavings in the bottom of the box for bedding.